

QUICK START GUIDE



Cisco Unity Express 8.6 Voice-Mail System

Set Up Your Voice Mailbox and Select the Language

If this is your first time accessing Cisco Unity Express and you do not have a PIN, you must call from your extension.

- **1.** Dial the internal or external number to call Cisco Unity Express.
- **2.** If asked for a PIN and you have one, enter it and press #.

You are prompted to set up a recorded name and personal greeting and change your password. To exit, press *.

To create a recorded name that identifies you to callers:

- **1.** The system states you have no recorded name. To record a name, press **1**.
- **2.** At the tone, say your first and last name. When done, press #.
- 3. Your newly recorded name plays.

 Press # to keep it, or 1 to rerecord.

To record a personal greeting:

- The standard greeting ("Sorry, <extension xxxx>/<username> is not available") plays. To keep this greeting, press #.
- 2. To record a new standard greeting, press 1.

 Speak your greeting. When done, press #.
- **3.** Your newly recorded greeting plays. To accept this greeting and continue, press #. To rerecord, press 1.

To change your password:

- 1. Enter your new password, which must be at least 3 digits. Press # when done.
- **2.** Re-enter your new password, then press #.

To change to another available language:

 Choose 4 Setup Options, then 4 Language Options.

Access Cisco Unity Express by Phone

Dial the Cisco Unity Express voice-mail system phone number.

- If asked for a PIN, enter it and press #.

 Note: If you are calling from someone else's phone, you must press * to enter your own ID (usually your extension) and press #. Then enter your PIN and press # again.
- If you are asked for your ID (usually your extension), enter it and press #. Then enter your PIN and press # again.

Access Cisco Unity Express by Computer

- From Microsoft Internet Explorer or Firefox, enter the hostname or IP address of your Cisco Unity Express server using the format http://<hostname>/user or https://<hostname>/user
- **2.** Log in to the application using your user ID and password.

You can change your mailbox settings, change your password, create distribution lists, modify your user profile, and set up voice-mail notifications (if enabled).

Listen to Messages

Perform steps in "Access Cisco Unity Express by Phone" to reach the main voice-mail menu.

- Press 1 to listen to new messages.
- Press 3 to listen to old messages, then:
 - Press 1 to listen to saved messages.
 - Press 2 to listen to deleted messages.

During message summary or playback, you can press the following numbers:

- 1 Restart message summary or playback
- 2 Save message
- 3 Delete message
- 4 Reply to message
- 44 Initiate a Live Reply call to message sender
- 5 Forward message
- 6 Save message as new
- Go back 3 seconds or, if paused, go back 3 seconds and continue playback
- B Pause message or, if paused, continue playback
- Go forward 3 seconds or, if paused, go forward3 seconds and continue playback
- # Skip summary or message

Note: Faxes can be printed. See the Cisco Unity Express Voice-Mail User Guide.

Send a Message

- Perform the steps in "Access Cisco Unity Express by Phone" to reach the main voice-mail menu.
- **2.** Press **2** to send a message.
- 3. Address message by name (default), or press
 ## to switch from addressing by name to
 addressing by number (extensions or
 distribution lists). For extensions at remote
 locations, enter the location ID before the
 extension number. Press ## to confirm
 selection. Press 1 to add another name, or go
 to next step.

If activated by your administrator, you can search the global directory for user names when addressing a message by name. Press 2.

4. Press # to start and # to stop recording.

Note: If you hang up at any point after recording your message, or before selecting a message option, and you have already addressed the message, your message is still sent. To cancel sending, press to return to the previous menu, or go to Step 6.

- Press 1 for additional message options and to address message (if not done earlier), or go to next step.
- **6.** Press # to send.
- If activated by your administrator, press 1 to leave another message for the same mailbox, or 2 to leave a message for another mailbox.

Anytime

- Press o to access help.
- Press * to cancel, exit, or back up
- Press # to skip or move ahead, complete or confirm addressing, accept changes, send message, and start and stop recording.

For More Information

See the Cisco Unity Express Voice-Mail User Guide for Advanced Features at:

http://www.cisco.com/en/US/products/sw/voicesw/ps5520/products_user_guide_list.html

Americas Headquarters Cisco Systems, Inc. 170 West Tasman Drive San Jose, CA 95134-1706 USA http://www.cisco.com Tel: 408 526-4000 800 553-NETS (6387) Fax: 408 527-0883



Cisco, Cisco Systems, the Cisco logo, and the Cisco Systems logo are registered trademarks or trademarks of Cisco Systems, Inc. and/or its affiliates in the United States and certain orther countries. All other trademarks mentioned in this document or Website are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (0705R)

© 2011 Cisco Systems, Inc. All rights reserved

OL-23883-02

